

## **OPERATION OF KUHLMAN GAUGE MODEL 1400**

### **PUTTING GAUGE AWAY OR IN CASE**

1. Close top cap and hose clamps.

### **TAKING GAUGE OUT OF CASE TO OPERATE**

1. Unlock hose clamps - relieve pressure.
2. Loosen top cap.

### **GAUGE IS NOW READY TO READ 16" WATER COLUMN**

### **FOR CHECKING SYSTEM WITH POUNDS PRESSURE NEUTRALIZE GAUGE.**

1. Open top cap.
2. Unlock line hose clamp and aspirator clamp.

### **TO PUT ON SYSTEM WITH POUNDS PRESSURE**

1. Close top cap - with fluid at zero.
2. Close line hose clamp and aspirator clamp.
3. Attach gauge to system to be checked.
4. Open line hose clamp - read pressure in lbs.

### **IF PRESSURE DRIPS IN TALL TUBE YOU HAVE LEAK IN SYSTEM**

### **TO REMOVE GAUGE FROM SYSTEM**

1. Close top cap - if open.
2. Close line clamp and aspirator clamp.
3. Remove gauge from system.
4. Open line hose clamp - relieve pressure then close line clamp - now put gauge in case.